



EziHorizo Square Bike Rack Installation guide

Site Selection

Suitable locations include;



- Above vehicle bonnet with appropriate clearance

Racks should be mounted at a height appropriate for a specific vehicle if clearance above the vehicle bonnet is required. Measures shown are an example only.

NOTE: If not mounting above a car bonnet, we recommend mounting the rack a minimum of 1300mm from the floor.

Locate and measure


- Locate suitable area for rack installation with correct clearance on all sides.
- Draw a horizontal line to mark height of higher fixing point.

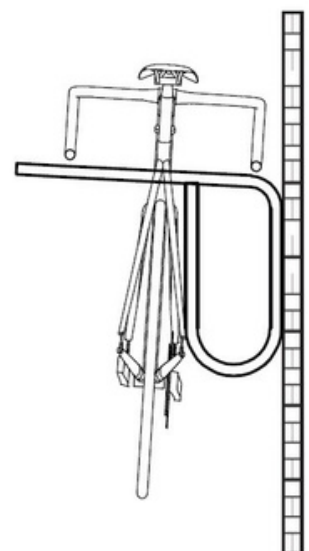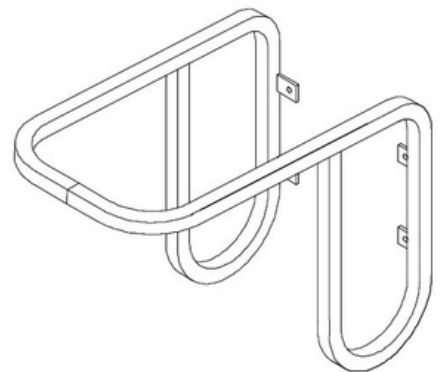

Mark and drill

- Place rack in desired position and mark all fixing points with a suitable marker
- Drill holes using a 8mm masonry drill bit to a depth of 70mm. For best results, use a 6mm bit first to prevent wandering of the larger bit. Clear holes of dust.

Do not drill over plumbing and/or electrical conduits.

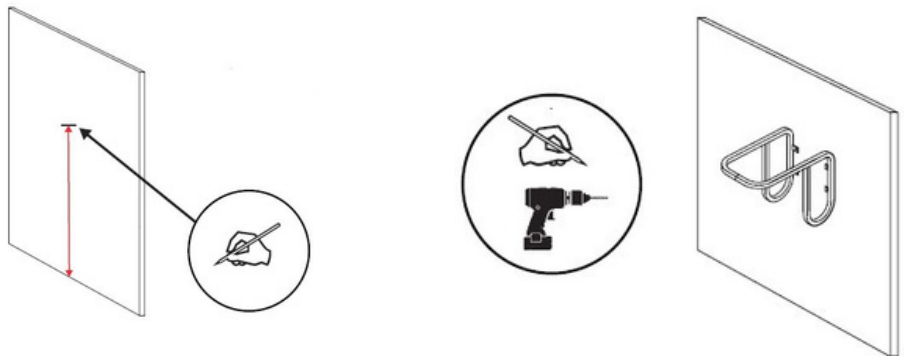

Fix

Place rack in position and partially tighten screws starting from the top position. Once all screws are in, continue to tighten until firm.

Use the 4 screw bolts (M8x60mm) provided plus a 13mm socket and driver to secure the racks.

